

Installation and Maintenance of A.R.I.'s K-060M1 Air & Vacuum Valves

A. Installation

- A.1 The air valve will be mounted on a riser, connected to the top of the pipe.
- A.2 An isolating valve will be installed below the air valve.



B. Basic, Periodic, Maintenance

- B.1 Shut the isolating valve below the air valve.
- B.2 Unscrew the bolts (2) that connect the valve cover (3) to its body (9).
- B.3 Wash the body, the screen and the cover in clean water in order to remove coarse grime or accumulated scale.
- B.4 Check body & cover coating for rust points. Recoat if necessary
- B.5 Reinstall in reverse order and fasten and tighten all bolts.
- B.6 Open the isolating valve beneath the air valve.

